



33-BOLLARD INSTALLATION GUIDE

1

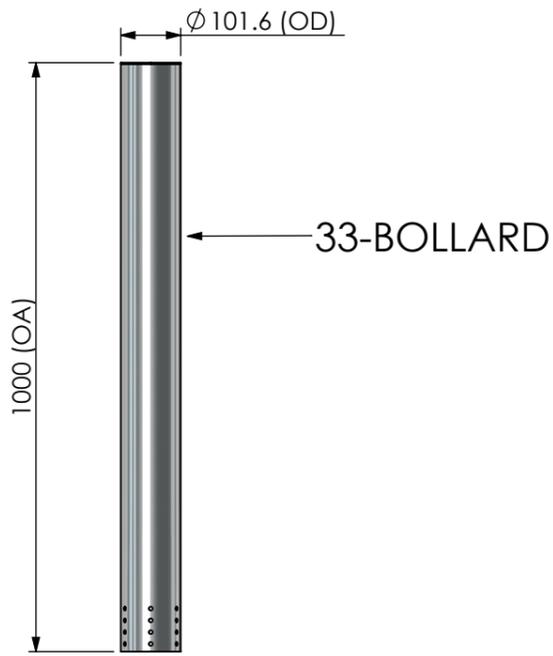


2

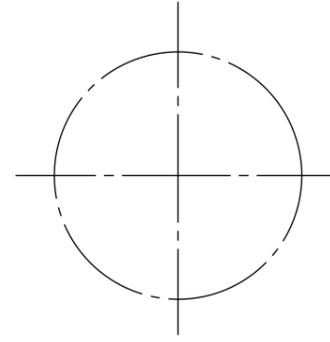

MARK POSITION IN CONCRETE


3

PROFESSIONAL CONCRETE CUTTING CONTRACTOR REQUIRED TO CUT HOLE.

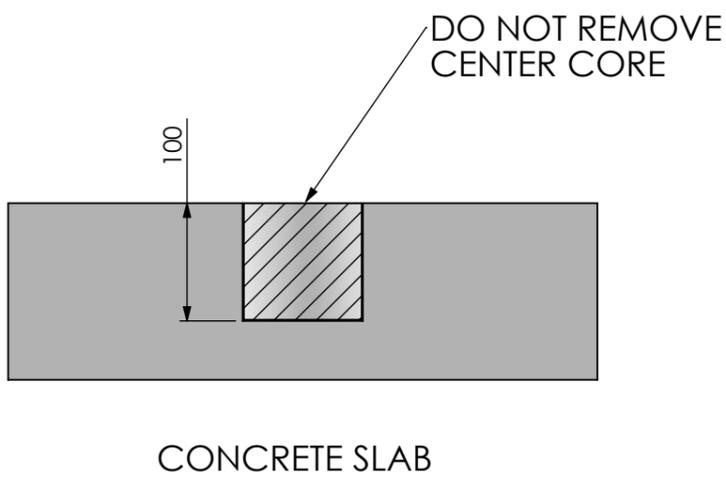


4

MAKE SURE SLOT IS CLEAR FROM DUST AND DRY. USE FAST SETTING CHEMICAL ANCHOR FOLLOWING INSTRUCTIONS ON TUBE.

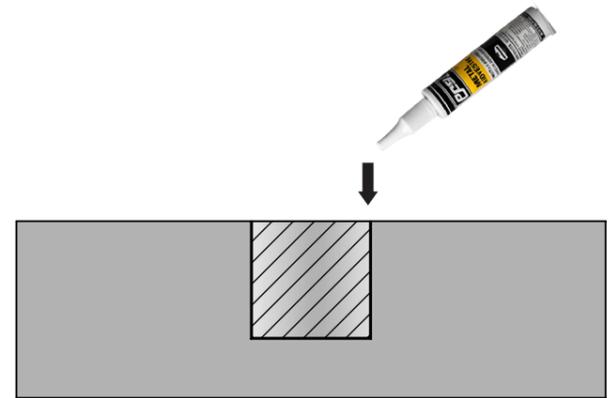

5

PLACE BOLLARD IN POSITION. MAKE SURE SQUARE

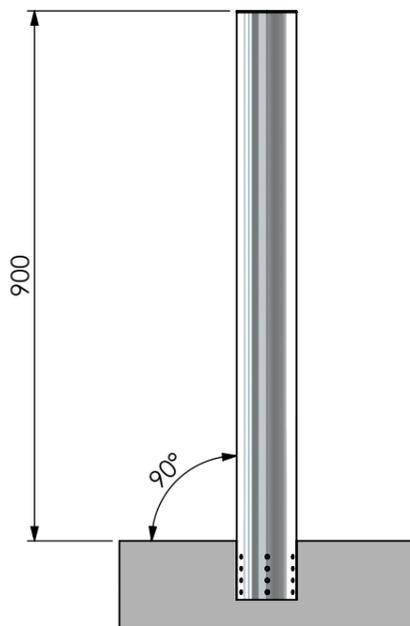

6

